




URINAL UT-2100



Specifications

BRAND	BELLA	PRODUCT TYPE	WALL HUNG MECHANICAL URINAL
RANGE	PREMIUM	COLOR/FINISH	WHITE
PRODUCT CODE	UT-2100	MATERIAL	CERAMIC
SIZE	380 X 330 X 690		

Drawing

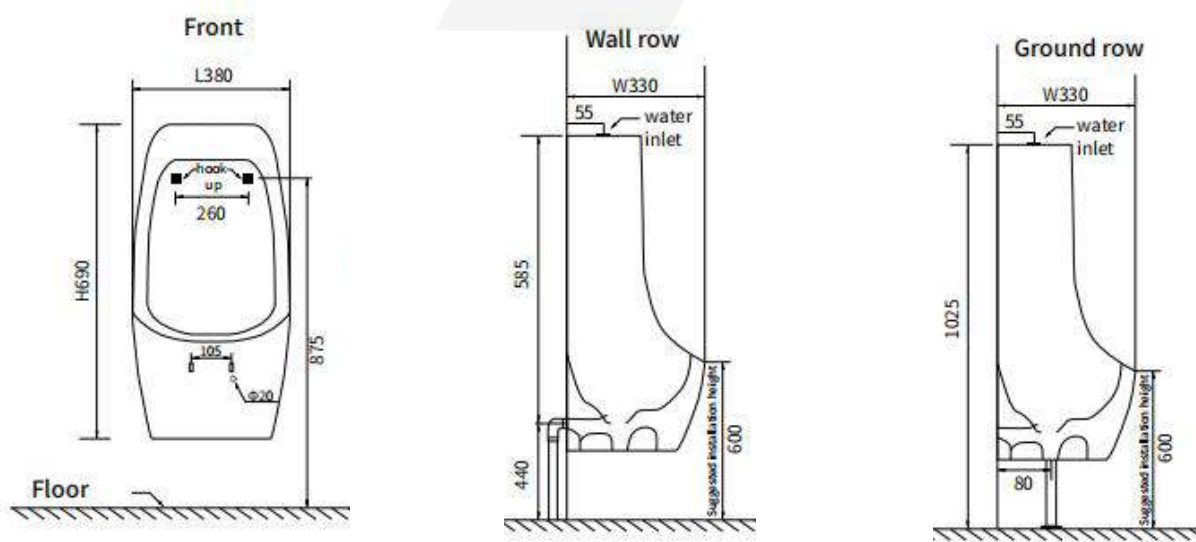

*All dimensions are in mm

BEFORE INSTALLATION


1. Understand all local regulations for reserved water supply pipes and drainage pipes.
2. Please open your product packaging carefully and check whether the product is damaged.
3. Please read the instruction manual carefully to familiarize yourself with the required tools, accessories and installation steps to avoid unnecessary losses.
4. Because ceramic products are easily damaged, be careful when installing and do not tighten the nuts too tightly.
5. After unpacking, please dispose of unnecessary packaging materials as soon as possible, otherwise personal injury may occur due to the random stacking of wooden frames, nails, cardboard and sealing tapes; in addition, do not let children play with the packaging bags, otherwise personal injury may occur.

Note: The relevant information contained in this installation manual is based on the most detailed product conditions at the time of printing. Our company guarantees reserves the right to make changes to product characteristics, packaging and accessories supply without prior notice.

INSTALLATION STEP

1. Before installation, check whether the wall is even. If the wall is uneven, it needs to be polished and repaired, match the water inlet pipe, drainage pipe, etc. according to the size and physical product. To avoid the pipeline being blocked by cement, sand or foreign matter, you can use a plastic bag to seal the outlet end of the pipeline first.
2. Determine the height of the urinal and the position of the hook. The recommended installation height of the urinal is about 60cm. It can be adjusted according to personal needs. Use a pencil to mark the position of the hook hole.
4. Use an electric drill to drill holes at the marked position, and use expansion tubes and screws to lock the hook. Do not use an oversized drill bit or expand the hole to avoid locking.
5. Wipe clean the water and dust around the urinal drain outlet, attach the drain hole rubber ring to the outer edge of the drain outlet, and then hang the urinal on the wall hook (the drain hole rubber ring is connected with the urinal drain outlet and toilet bowl cooperate well with each other), and lock the fixing screws (fixing the urinal to the wall).
6. Connect the water inlet components (flush valve, flush pipe, etc.).
7. Turn on the water source and test the water. If there is water leakage, it means that the drain hole rubber ring is not installed correctly and the urinal should be removed.
8. If there is no leakage after the toilet is tested, glass glue can be used to fill the gap between the urinal and the wall, and the installation is completed.

Note: It is absolutely prohibited to use epoxy resin glue or sealing materials that become larger after hardening, and our company will not be responsible for any losses caused by this.

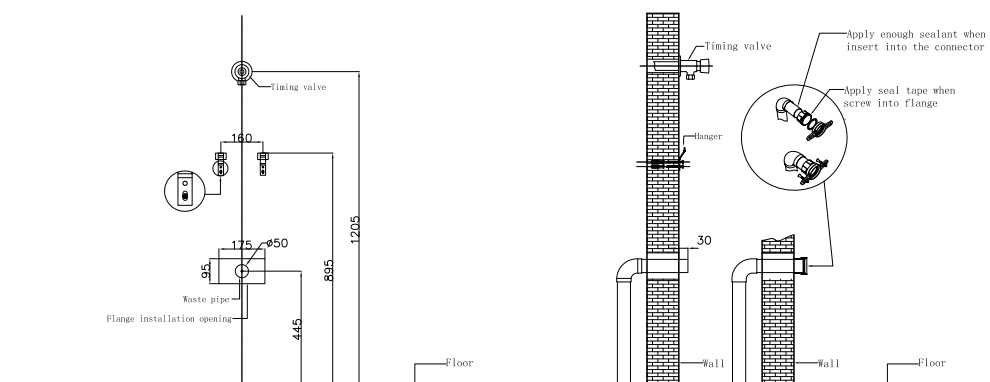

MAINTENANCE TIPS

1. It is recommended to clean with detergent every week to prevent mineral accumulation.
2. The detergents used for cleaning and maintaining products should comply with national standards. Do not use acidic, alkaline or abrasive detergents. Abrasive cleaners may damage the surface of the product.
3. Avoid direct impact of hard objects on the surface of the product to prevent product damage.